

# REPLACEMENT PARTS CATALOG 2015



maximatecc/AST  
Progrés 32, 08191 Rubi,  
Barcelona, Spain  
PHONE: +34 93 586 20 73  
FAX: +34 93 586 2266  
EMAIL: [customerservice@ast.es](mailto:customerservice@ast.es)

# AST REPLACEMENT PARTS CATALOG

Since the 1960s, AST has provided robust, high-quality instrumentation products to leading off-road vehicle OEMs.

This replacement part catalog features original replacement parts for tractors and trucks manufactured by Landini, Massey Ferguson, Fendt, John Deere, Jungheinrich, Claas, Linde and Same.



Landini _____	<b>4</b>
Ammeters _____	4
Flashers _____	4
Angular drives _____	4
Turn switches _____	4
Clusters _____	4
Fuel senders _____	4-5
Fuel gauges _____	6
Pressure gauges _____	6
Lampholders with bulbs _____	6
Temperature senders _____	6
Tractometers _____	6
Mechanical switches _____	7
Pressure switches _____	7
Temperature gauges _____	7
Tachometers _____	7-8
Fuel filters _____	8
Magnetic sensors _____	8
RDM instruments _____	9
Ignition switches _____	9

Massey Ferguson _____	<b>10</b>
Flashers _____	10
Fuel senders _____	10
Fuel gauges _____	10
Mechanical switches _____	10
Pressure switches _____	11
Temperature senders _____	11
Temperature gauges _____	11
Tractometers _____	11
Timers _____	11
Buzzers _____	11
Temperature switches _____	11
Magnetic sensors _____	12
Water level sensors _____	12

Fendt _____	<b>13</b>
Fuel senders _____	13

John Deere _____	<b>14</b>
Flashers _____	14
Fuel senders _____	14
Hydraulic pressure switches _____	14

Jungheinrich _____	<b>15</b>
Fuel senders _____	15
Temperature senders _____	15
Lampholders with bulbs _____	15

Claas _____	<b>16</b>
Flashers _____	16
Fuel senders _____	16
Mechanical switches _____	17
Temperature senders _____	17
Tachometers _____	17
Temperature switches _____	18
Fuel filters _____	18
Magnetic sensors _____	18

Linde _____	<b>19</b>
Flashers _____	19
Clusters _____	19
Fuel switches _____	19
Temperature switches _____	19

Same _____	<b>20</b>
Flashers _____	20
Angular drives _____	20
Fuel gauges _____	20
Pressure gauges _____	20
Lampholders with bulbs _____	20
Temperature senders _____	20
Temperature gauges _____	21
Voltmeters _____	21
Tractometers _____	21-22
Hourmeters _____	22

Application notes _____	<b>23</b>
-------------------------	-----------



## AMMETERS

OEM part number	AST part number
908430M1	105207
9084430M1	109907

## FLASHERS

OEM part number	AST part number
3533171M92	122195

## ANGULAR DRIVES

OEM part number	AST part number
E2758346	130207

## TURN SWITCHES

OEM part number	AST part number
881670M1	161021

## CLUSTERS

OEM part number	AST part number
3305408M93	190221
3542333M91	210349
4203484M91	213969
3533146M93	215309
3538068M93	215340
3683883M91	218164

## FUEL SENDERS

OEM part number	AST part number
1678517M2	250337
1678518M2	250338
1661794M92	250340
1825031M91	250352



## FUEL SENDERS

OEM part number	AST part number
3300380M91	250355
3308866M91	250357
3305908M91	250358
3301628M91	250359
1425614M91	250360
908600M1	250436
897389M91	250438
962384M3	250446
962386M3	250447
3530864M92	250813
3530230M92	250817
3532753M93	250830
3534871M91	250831
3535364M91	250832
3307091M92	250835
3530307M93	250836
3309386M93	250837
3539171M91	250840
3542603M92	250847
3543790M91	250851
3546974M91	250852
3551179M91	250870
3552216M92	250874
3556639M93	250878
3554216M91	250886
3554142M91	250887
3651263M91	250898
3303656M91	251302



## FUEL GAUGES

OEM part number	AST part number
260421	260421
3541211M91	260425
221542	260453
3684723M91	260454

## PRESSURE GAUGES

OEM part number	AST part number
355211	355211
3381907M1	355212

## LAMP HOLDERS WITH BULBS

OEM part number	AST part number
3541333M91	371401
3311408M91	371404
3653975M91	371412

## TEMPERATURE SENDERS

OEM part number	AST part number
1877731M92	405811

## TRACTOMETERS

OEM part number	AST part number
3305407M92	458503
3530293M92	458509
1674637M91	459916
1877718M92	459917
3381905M1	459924
3381904M1	459925



## MECHANICAL SWITCHES

OEM part number	AST part number
3652689M91	290138

## PRESSURE SWITCHES

OEM part number	AST part number
1877721M92	342120

## TEMPERATURE GAUGES

OEM part number	AST part number
3541212M91	410409
3653935M1	410475
3684722M91	410476
221613	410510
3680254M91	410511
Standard	415211
3381906M1	415212
1977719M92	419930

## TACHOMETERS

OEM part number	AST part number
3669459M91	470409
S16829	470412
3541353M91	470429
3651552M91	470435
3541996M91	470439
3651550M91	470440
3653936M1	470442
3654642M91	470444



## TACHOMETERS

OEM part number	AST part number
3658071M91	470445
3651712M91	470747
3654572M91	470448
3657049M91	470449
3657045M91	470450
3658068M91	470452
3657043M91	470454
3658071M91	470455
3666705M91	470556
221541	470457
3680253M91	470458

## FUEL FILTERS

OEM part number	AST part number
3651812M91	510102
898540M91	515001

## MAGNETIC SENSORS

OEM part number	AST part number
3583285M1	632001
3583286M1	632002
3550710M91	632003
3583287M2	632004
3712058M1	632005
4208334M1	632010
3647166M91	632040
3648189M92	632041





## RPM INSTRUMENTS

OEM part number	AST part number
3311406M91	680421
3540012M9	680422
3540011M91	680427
3541674M91	680430
3311406M92	680432

## IGNITION SWITCHES

OEM part number	AST part number
3547105M91	770008



## FLASHERS

OEM part number	AST part number
4271990M1	122150
4271989M1	122151
3618239M1	122180
3778394M1	122182

## FUEL SENDERS

OEM part number	AST part number
3582876M1	250829
3388604M92	250849
3712529M91A	250863
3713028M1	250864
3712952M01A	250869
3715286M3	250879
3777388M1	250881
3786032M2	250905
3787229M2	250913
3789697F1	250916
4273755F1	250917

## FUEL GAUGES

OEM part number	AST part number
1877717M92	269930

## MECHANICAL SWITCHES

OEM part number	AST part number
3780395M2	290132
3780580M1	290133
3780581M2	290134



## OIL PRESSURE SWITCHES

OEM part number	AST part number
1877721M92	342120

## TEMPERATURE SENDERS

OEM part number	AST part number
3618249M3	401420
3583331M1	401807
1877731M92	405811

## WATER TEMPERATURE GAUGES

OEM part number	AST part number
1877719M92	419930

## TRACTOMETERS

OEM part number	AST part number
1674638R92	458834

## TIMERS

OEM part number	AST part number
3713403M3	480401
4271991M1	480407

## BUZZERS

OEM part number	AST part number
3320197M1	480410/1

## TEMPERATURE SWITCHES

OEM part number	AST part number
3595187M1	501411



## MAGNETIC SENSORS

OEM part number	AST part number
3583285M1	632001
3583286M1	632002
3583287M1	632004
3712058M1	632005

## WATER LEVEL SENSORS

OEM part number	AST part number
3617129M1	671801



## FUEL SENDERS

OEM part number	AST part number
G148200060011	251140
G149200060012	251141
G149200060021	251144
H716201061102	251148
G916201061152	251149
H718202060110	251154
H718202060120	251155
G117200060020	251156
G210202061020	251159



## FLASHERS

OEM part number	AST part number
-----------------	-----------------

AL202581	122152
----------	--------

## FUEL SENDERS

OEM part number	AST part number
-----------------	-----------------

AZ32189	250516
---------	--------

AL60502	251115
---------	--------

AL63554	251116
---------	--------

AL68201	251124
---------	--------

AL38313	251152
---------	--------

AL29847	251153
---------	--------

## HYDRAULIC PRESSURE SWITCHES

OEM part number	AST part number
-----------------	-----------------

AL67715	280422
---------	--------



## FUEL SENDERS

OEM part number	AST part number
50109642	250666
50109643	250667
50109644	250668
52037223	250674
52041092	250675

## TEMPERATURE SENDERS

OEM part number	AST part number
50108078	401203
50108075	401610
50108072	401852
51047756	403803

## LAMP HOLDERS WITH BULBS

OEM part number	AST part number
50123928	371402



## FLASHERS

OEM part number	AST part number
7700071886	122152
7700071887	122153
7700028142	122195

## FUEL SENDERS

OEM part number	AST part number
7700566466	250175
7700058531	250672
7700039224	250871
7700039225	250872
7700040651	250877
7700043866	250880
7700054416	250896
7700054417	250897
7700057844	250901
7700052413	250902
7700056726	250904
7700066378	250908
7700064514	250909
7700064464	250911
7700066568	250912
7700068026	250914
7700019512	251009
7700019511	251010
7700020170	251011
7700033479	251014





FUEL FILTERS

OEM part number	AST part number
7700055239	510102

MECHANICAL SWITCHES

OEM part number	AST part number
7700050859	290135
7700050861	290136
7700050980	290137
7700060161	290143
10409841	290144

TEMPERATURE SENDERS

OEM part number	AST part number
7700058935	401423
7700054355	405020
7700054356	405021
7700065083	405022

TACHOMETERS

OEM part number	AST part number
7700031173	478010
7700031174	478011
7700031170	478012
7700031171	478013
7700033517	478014
7700058589	478028
7700058590	478029



## TEMPERATURE SWITCHES

OEM part number	AST part number
7701033384	501001
7700855325	501416
7700737576	501826

## MAGNETIC SENSORS

OEM part number	AST part number
7700054283	632002
7700057960	632006



FLASHERS

OEM part number	AST part number
9732502	122174

CLUSTERS

OEM part number	AST part number
9460765	191018
7917292523	191019
7917292553	191038
7917292580	191039

FUEL SWITCHES

OEM part number	AST part number
9731238	362261
9731239	362262

TEMPERATURE SWITCHES

OEM part number	AST part number
9451006	501409



## FLASHERS

OEM part number	AST part number
286390050	122177
Standard	122195

## ANGULAR DRIVES

OEM part number	AST part number
270496700	130107

## FUEL GAUGES

OEM part number	AST part number
813050	265001
270594100	265255

## PRESSURE GAUGES

OEM part number	AST part number
813070	355002
270190700/20	355235

## LAMP HOLDERS WITH BULBS

OEM part number	AST part number
379601	379601

## TEMPERATURE SENDERS

OEM part number	AST part number
270999300	401203
270996400/10	401421
270998300	401422
270991000/10	402202



## TEMPERATURE GAUGES

OEM part number	AST part number
813090	415001
1061973	415085
000917350/10	415086
270690900	415236

## VOLTMETERS

OEM part number	AST part number
813060	445001
270992800	445207

## TRACTOMETERS

OEM part number	AST part number
270496600	451039
270496800	451040
270496900	451041
270497500	451042
270497100/10	451044
270497300/10	451045
270497600	451052
270497900	451055
270498000/10	451056
270497800/20	451058
270497400	451059
270496300	451060
2704989000	471020
270499000	471021
27049840.0/10	474003
270498800	474006



## TRACTOMETERS

OEM part number	AST part number
270499100/11	474007
270499200/10	474008
270499840/10	474009
270499850/10	474010
905070/40	474051
905307/40	474052
270498200/20	474053
270498300/20	474054

## HOURLMETERS

OEM part number	AST part number
Standard	474205



## APPLICATION NOTES

- Correct application of AST products is the responsibility of the system designer.
- AST gauges should be matched with appropriate AST sender to assure system compatibility.
- For AST gauges, use in applications subject to excessive moisture is not recommended.





© 2015 maximatecc

maximatecc • C/Progres N° 32, 08191 Rubi (Barcelona) Spain •  
Phone: 34.935862073 • Fax: 34.935862266 • [www.maximatecc.com](http://www.maximatecc.com)